

INDUSTRIAL and SANITARY RTDs

 
Wiring and Installation Instructions for Industrial models NP100, NT100 and Sanitary models SP100, ST100

 
Termination Options (NP and SP)

 
- AXX (M12 w/Mating Connector) and E00 (M12)
- BXX (Strain Relief w/Cable)
 2 Wire RTD 3 Wire RTD 4 Wire RTD

 red red white white
 black black green
 black
- DXX (Connection Head) w/Terminal Block A1
 Wire RTD 3 Wire RTD 4 Wire RTD

 red red red white white









Termination Options (ST and NT)

AXX (M12 w/Mating Connector) and E00 (M12) w/Integrated Transmitter Z1

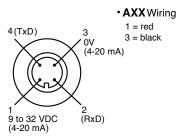


Installation Instructions

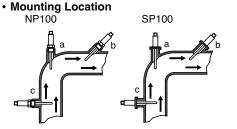

- a. At angle sections, against the direction of flow.
- b. In smaller pipe, against the direction of flow.
- c. Perpendicular to the direction of flow.

Refer to www.teltru.com/rtd_trans.asp for temperature and pressure limits.

• K00 (M12) w/Integrated Transmitter, reverse polarity

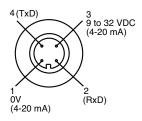

www.teltru.com 01204012 Rev 916