# TEL-TRU

### **TEL-TRU MANUFACTURING COMPANY**

## XTR-BT CONFIGURATION KIT FOR REMOTE CONFIGURATION AND MONITORING

XTR-BT is a Bluetooth® modem for wireless communication between smartphones/tablets and Tel-Tru temperature transmitters. Together with the app, you can configure and monitor the transmitter while it is still mounted in the process. Simply plug in your XTR-BT to the USB connector on the transmitter and connect with your portable device. Thanks to the extended range that Bluetooth offers, you can communicate with the transmitter remotely.



- · Communication via Bluetooth
- · Great tool for service and maintenance
- · Optimized for work on the field
- · Small form factor of XTR-BT modem
- · Live monitoring and diagnostics



**DIMENSIONS:** 

Ambient temperature operating -4/122°F or -20/50°C

Bluetooth BLE 4.2

Size2.8 x 1.1 x 0.95 inchesWeight0.11 lbs. including batteries

**DID** D038134

Included in the kit XTR-BT, USB-Cable, Batteries,

and Quick guide




#### **CONNECTIONS**

#### Connection cable



USB Mini-B From Bluetooth modem to transmitter

#### Installation

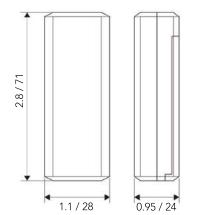



#### HOW TO ORDER

XTR-BT Bluetooth Configuration Kit

**XTRBT** 



#### **Tel-Tru Manufacturing Company**

inches / mm

408 St. Paul St., Rochester, New York 14605 USA
Phone: 585.232.1440 • 800.232.5335 • Fax: 585.232.3857 • E-mail: info@teltru.com • Web: www.teltru.com