REMO-TEL™ INDUSTRIAL QUICK START GUIDE

TEL-TRU® TEMPERATURE SOLUTIONS

Customer Focused Since 1916.

WHAT'S IN THE BOX

Configurable Probe

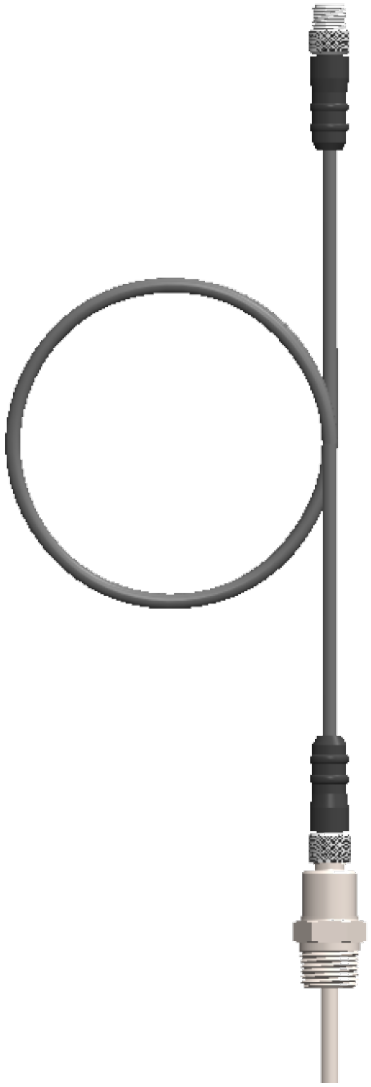

One Remo-Tel Unit

REMO-TEL® INDUSTRIAL QUICK-START GUIDE

STEP 1: ACTIVATE SUBSCRIPTION

Register and activate your new Remo-Tel at https://remotel.teltru.com

Step 2-5 Video Tutorial: Video: https://youtu.be/S4QPI-ZeCRs

STEP 2: ASSEMBLE

Assemble the Remo-Tel device by threading the connector of the cable onto the connector mounted to the enclosure (Figure 1).

Figure 1

STEP 3: INSTALL

Mount the Remo-Tel on a wall with an outlet near the process being monitored (Figure 2). *If using a probe with a threathed connection,* ***install probe to the process first (Figure 3)***, then thread the open end of the cable to the probe. Plain probes can be zip-tied to the outside of a pipe. **Do not place tension on the cables.**

Figure 2

Figure 3

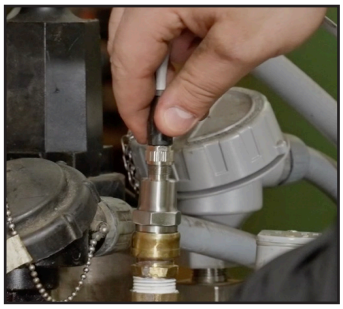

STEP 4: POWER ON

Power on the device by simply plugging the power cord into an outlet. The LED will turn to solid blue when the device has completed its start-up sequence (Figure 4).

Figure 4

Basic LED Status Chart

Flashing Yellow	Unit is initializing
Flashing Green	Unit connected with cell tower and is registering with the server
Solid Blue	Unit is normally operating and actively monitoring the environment
Solid Red	No cellular reception, try a different location

STEP 5: READ DATA

After a few minutes, you will see the first set of temperature readings on your Remo-Tel Monitoring Dashboard (www.teltru.com/remotel). You can download the historical data for your records by clicking “Export to .CSV”.

For the full user manual and detailed LED statuses go to the Remo-Tel® page on our website.

TEL-TRU® TEMPERATURE SOLUTIONS

SHOP ONLINE
www.teltru.com

Phone: (585) 232-1440
(800) 232-5335
408 St. Paul Street, Rochester, NY 14605 USA

RGPG2405
© 2026